Chapter 4 Saving Designs from Your PC

1. Connection to Your PC

You can import designs stored in your PC and save them in the machine memory.

• This operation requires you to install DG by Pulse (optional design creation software) on your PC. For more information, refer to the user's manual for DG by Pulse.

1-1. How to connect the machine to your PC



1 Turn OFF the PC, rooter, and machine and connect the LAN between the PC and machine.



- To connect the machine via a router to your PC, use a straight cable available on the market.
- 2 Turn ON the rooter.
- 3 Turn ON the PC and start "DG by Pulse".
- 4 Turn ON the machine.



- ~ ~
- \square
- To use this feature, enter the password to set the functional limit level to "SEL".

6 Press P7

7 Select "78. Optional device (software)".







9 1 <u>Network</u> (5), Nemal Auto-Law) No (5), Nemal Auto-Law) =	To select "1. Network".
10 P1	Press .
$11 \underbrace{\text{Network}}_{\text{Network}} \underbrace{\text{Normal}}_{\text{Methods}} \underbrace{\text{Normal}}_{\text{Normal}} \underbrace{\text{Normal}}_{\text{Methods}} \underbrace{\text{Normal}} \underbrace{\text{Normal}}_{\text{Methods}} \text{Norm$	Press with and select "Network" and select
Verter time 0, 0, 0, 0 Add gateway. No Convers 0, 0, 0 Convers 0, 0, 0 Convers 0, 0, 0	Press press next to "IP address" and select "Auto".
13	Press P2 ¹ . Various addresses are automatically acquired.
	 If automatic acquisition fails, check the LAN cable connection, operating steps, and the settings of DG by Pulse.
DNS No \swarrow P1 122 164 - 10 102 164 - 10 7 8 9 4 5 6 1 2 3 0 Bark DC Type Periods comm \checkmark \checkmark \checkmark \checkmark 14	Press 2. The machine and PC are connected.